

FIG. 1


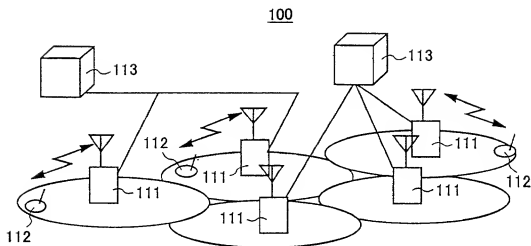


FIG. 2

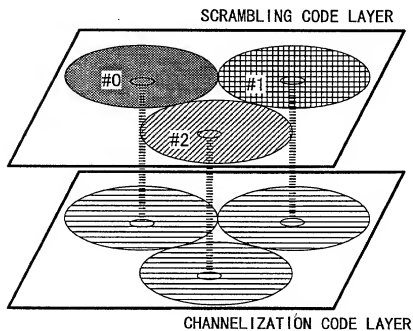

10072993-021202

FIG.3

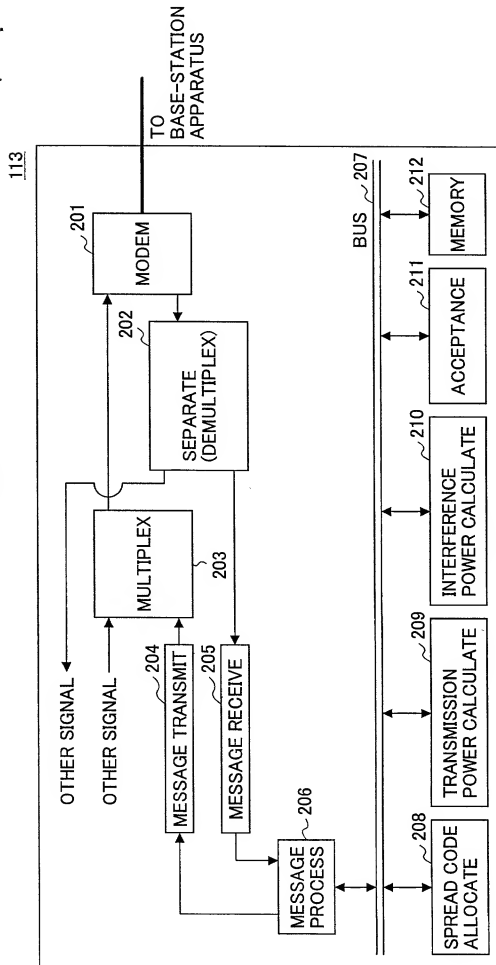


FIG.4

BASE STATION 003	
BASE STATION 002	
BASE STATION 001	
CHANNELIZATION CODE #	USE SITUATION (1 : ON USE 0 : VACANT)
0	1
1	0
2	1
.	.
.	.
.	.
M	0

10072993.021202

202120*562/001

FIG.5


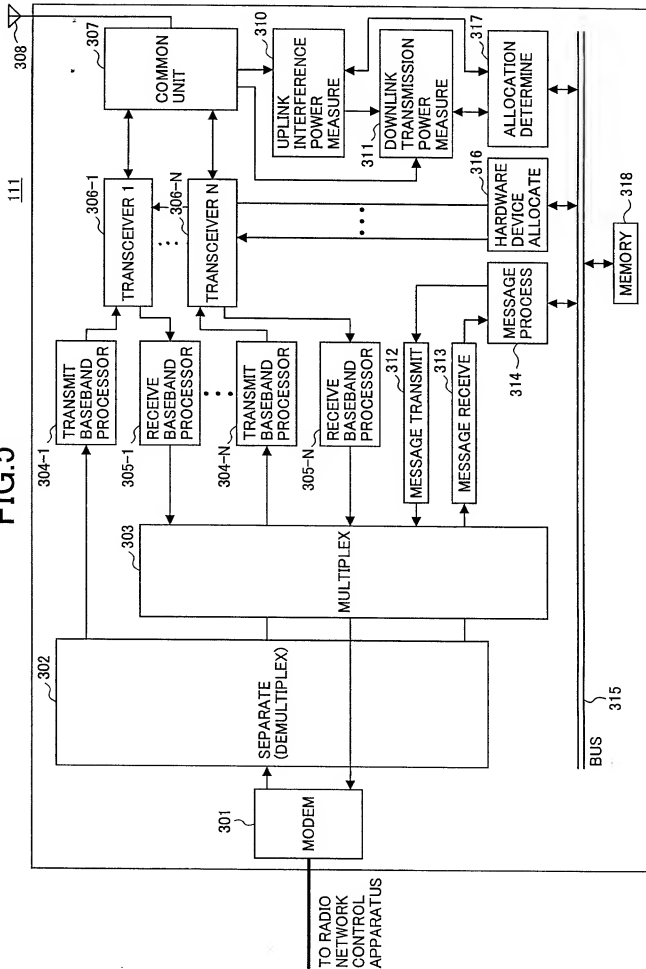


FIG.6

HARDWARE DEVICE #	USE SITUATION (1 : ON USE 0 : VACANT)
1	1
2	0
3	1
.	.
.	.
.	.
N	0

10072993.021202
202120-2662/001

FIG.7

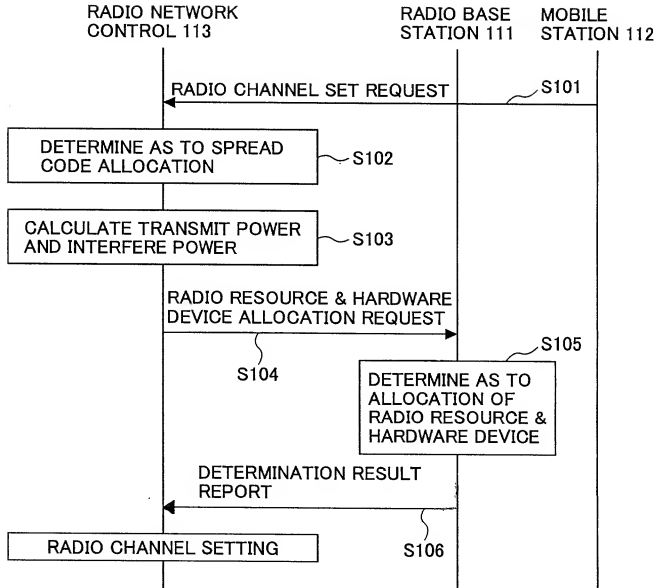

10072993.024202

FIG.8

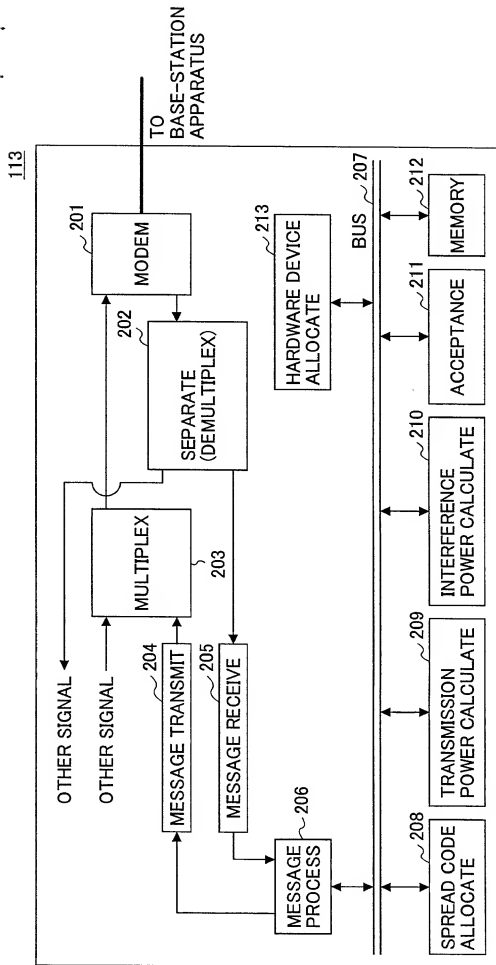


FIG.9

BASE STATION 003	
BASE STATION 002	
BASE STATION 001	
HARDWARE DEVICE #	USE SITUATION (1 : ON USE 0 : VACANT)
1	1
2	0
3	1
.	.
.	.
.	.
N	0

10072993.021202

FIG.10


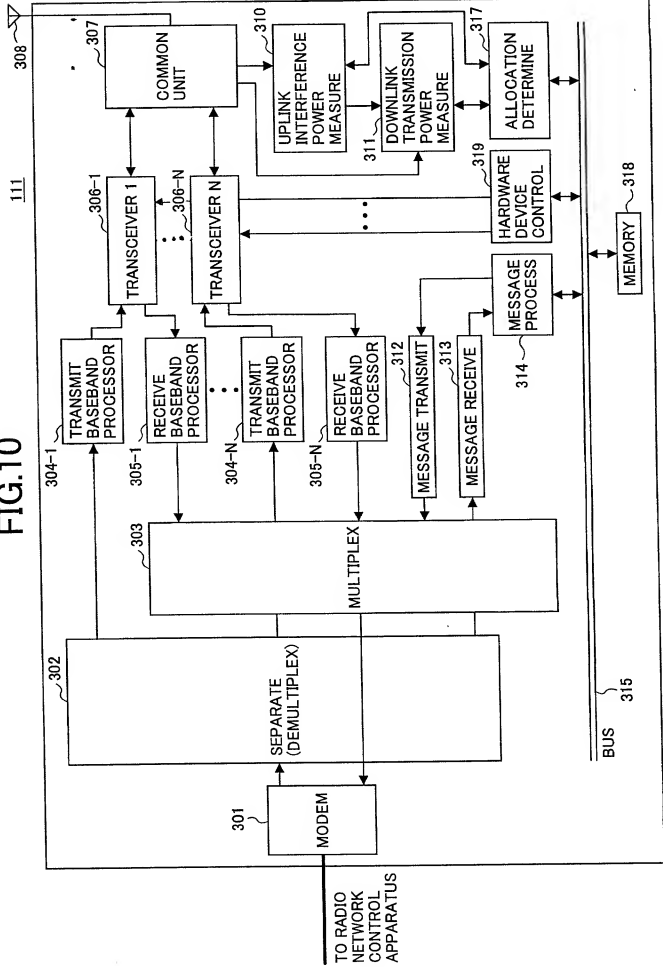


FIG.11

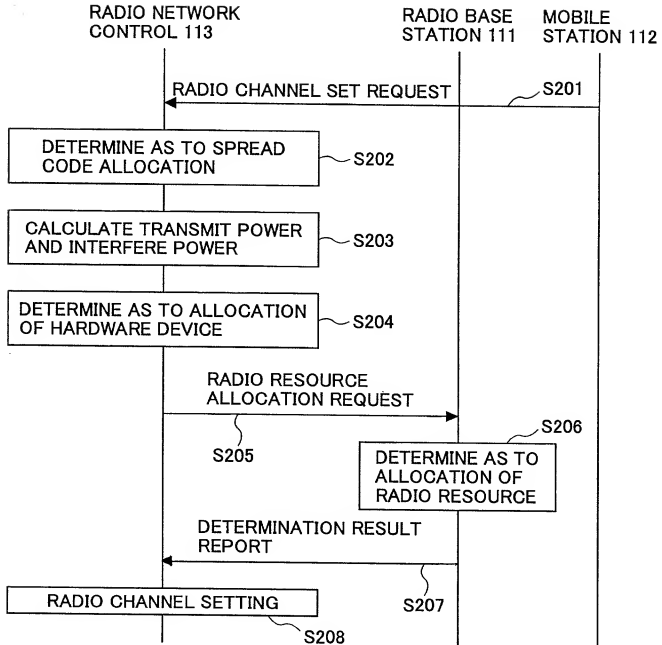

10072953.021202

FIG. 12

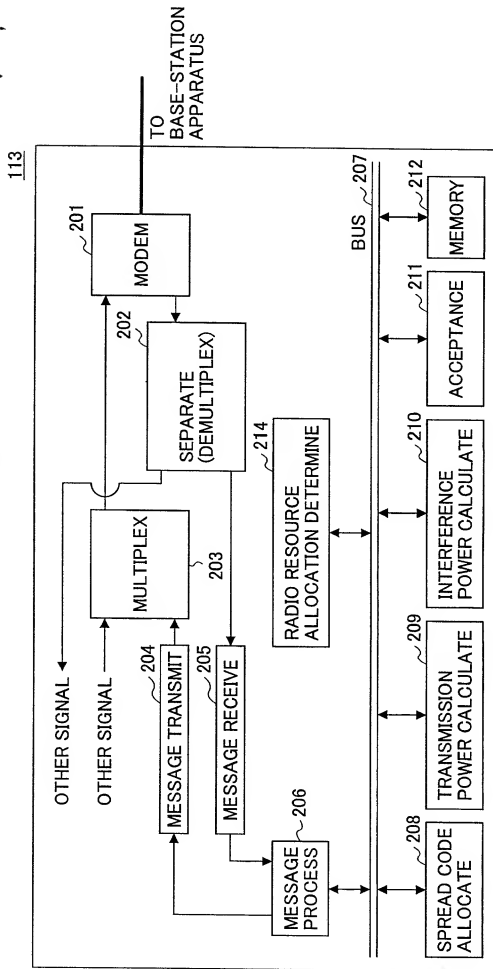


FIG.13


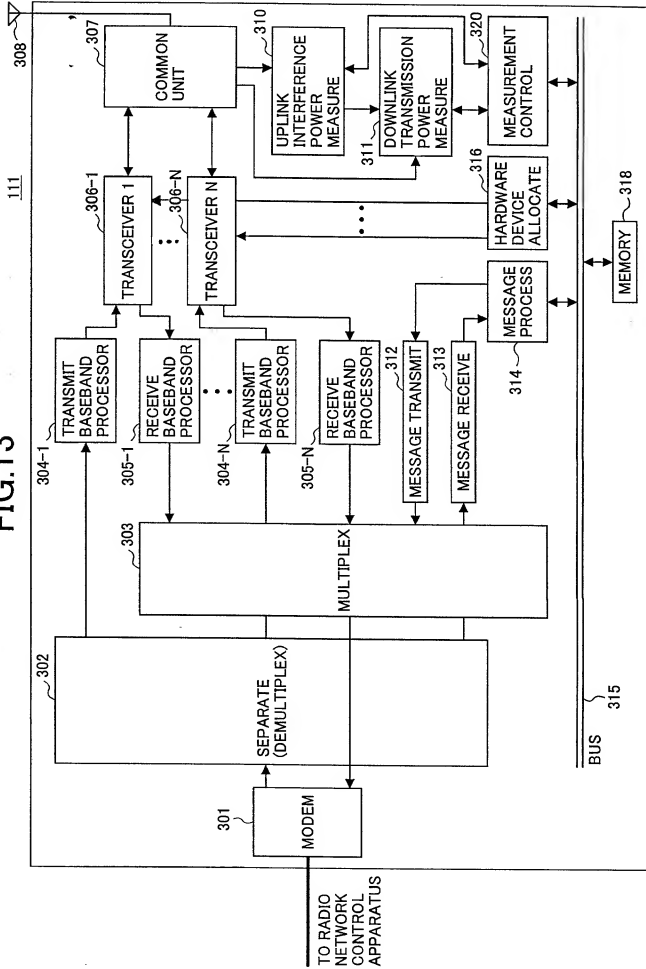


FIG.14

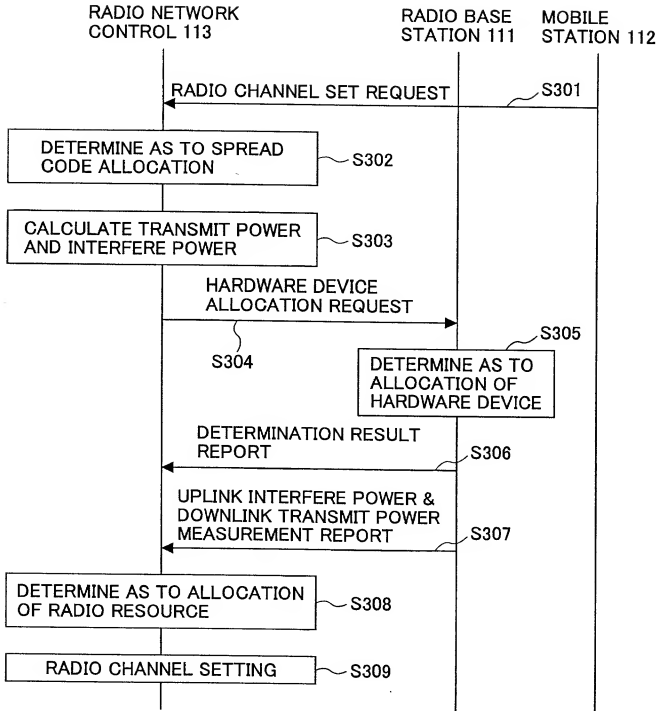

10072993.021202

FIG. 15

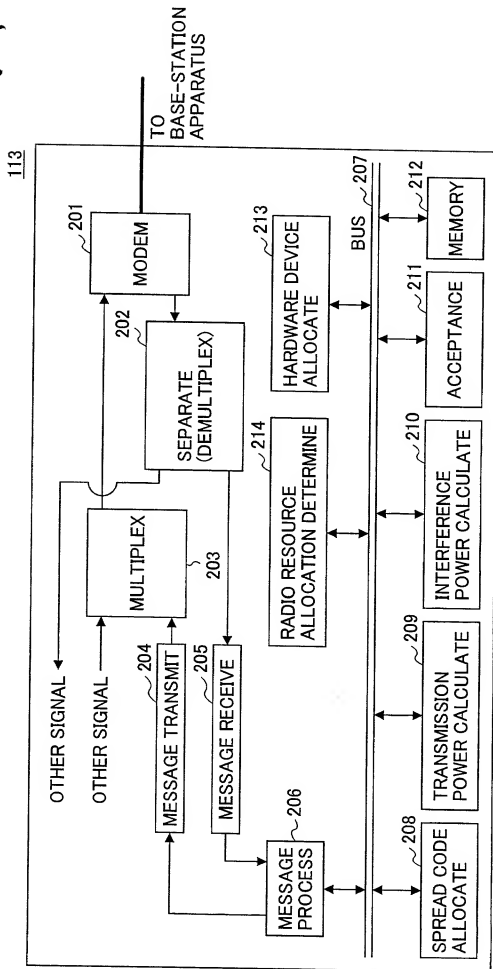


FIG.16

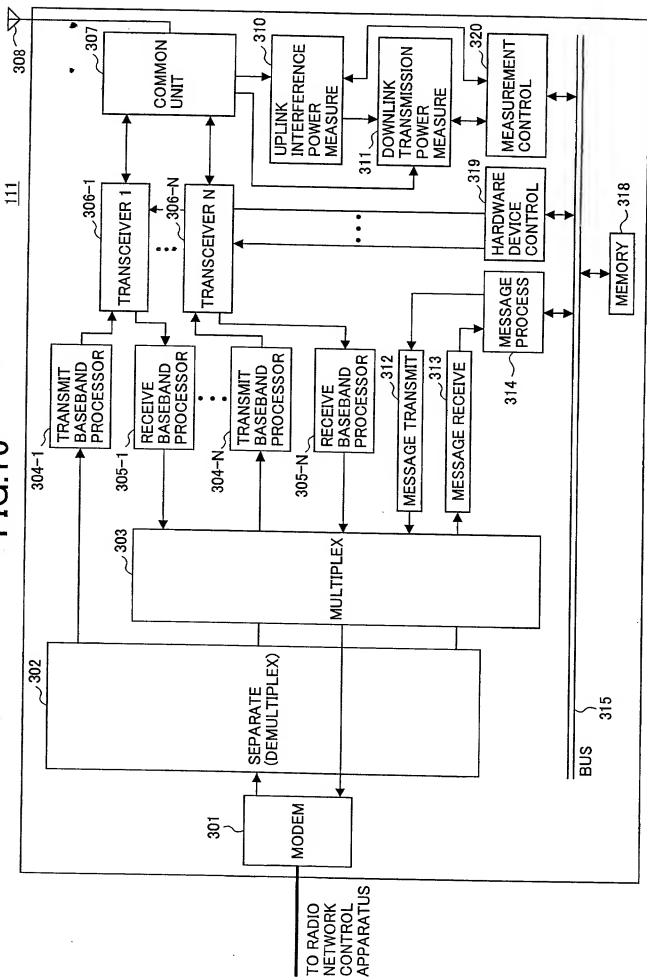


FIG.17

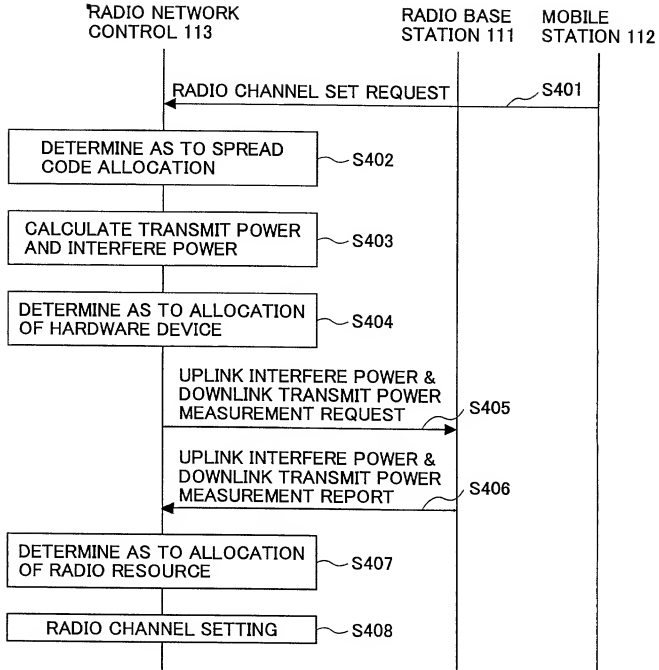


FIG.18

INTERFERENCE POWER THRESHOLD	TRANSMISSION POWER THRESHOLD
THR-i	THR-p

FIG.19

RADIO BASE STATION #	INTERFERENCE THRESHOLD	TRANSMISSION POWER THRESHOLD
0	THR-i1	THR-p1
1	THR-i2	THR-p2
2	THR-i3	THR-p3
.	.	.
.	.	.
.	.	.
K	THR-iK	THR-pK

FIG.20

RADIO CHANNEL TYPE #	INTERFERENCE POWER INCREASE AMOUNT	REQUIRED TRANSMISSION POWER
0	interfere1	power1
1	interfere2	power2
2	interfere3	power3
.	.	.
.	.	.
.	.	.
J	interfereJ	powerJ

10072993-021202